



Programming 2260/2262/2264 SAW Type Wireless Remotes and Security Devices

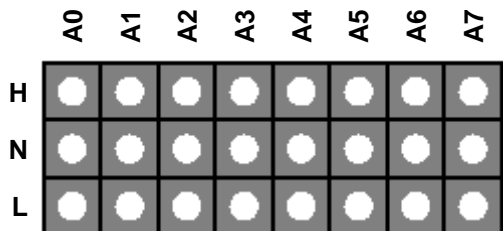

Address only setting, for House Code, Unit Bank and Mode, are usually provided in wireless remotes. Programming is performed by bridging two circuit board pads with solder or placing shunts onto jumper header pins.

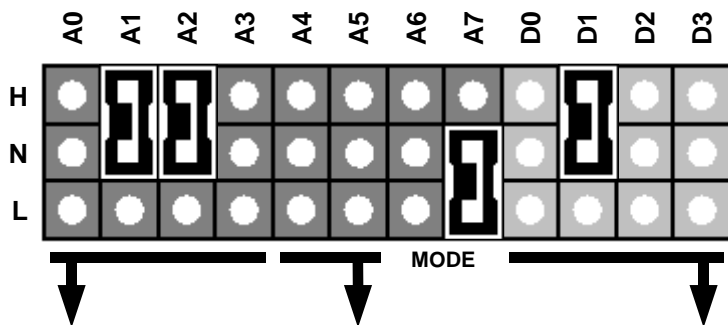

Address/Data setting, for House Code, Unit Bank, Mode and Unit Number, are provided in wireless security devices such as door/window sensors and motion detectors. Programming is performed by placing shunts onto jumper header pins.

The example (at the left) is for a motion detector programmed to turn a device on for 2 minutes.

House Code: G Unit Code: 2
A6/A7 Mode: Turn on, delay 2 minutes, turn off

HOUSE CODE				
A0	A1	A2	A3	HOUSE
N	N	N	N	A
N	N	N	H	B
N	N	H	N	C
N	N	H	H	D
N	H	N	N	E
N	H	N	H	F
N	H	H	N	G
N	H	H	H	H
H	N	N	N	I
H	N	N	H	J
H	N	H	N	K
H	N	H	H	L
H	H	N	N	M
H	H	N	H	N
H	H	H	N	O
H	H	H	H	P

UNIT BANK		
A4	A5	UNITS
N	N	1-4
N	H	5-8
H	N	9-12
H	H	13-16

UNIT SELECTED						
A4	A5	D0	D1	D2	D3	UNIT
N	N	H	N	N	N	1
N	N	N	H	N	N	2
N	N	N	N	H	N	3
N	N	N	N	N	H	4
N	H	H	N	N	N	5
N	H	N	H	N	N	6
N	H	N	N	H	N	7
N	H	N	N	N	H	8
H	N	H	N	N	N	9
H	N	N	H	N	N	10
H	N	N	N	H	N	11
H	N	N	N	N	H	12
H	H	H	N	N	N	13
H	H	N	H	N	N	14
H	H	N	N	H	N	15
H	H	N	N	N	H	16

JUMPER LEGEND

H
A jumper or solder bridge is inserted between N and H.

N
No jumper or solder bridge is inserted.

L
Optional and is coded same as N except for Control Mode setting.

CONTROL MODE "A6" and "A7"

A6	HIGH	Substitute "UNIT 1 On" to "All Lights On"
	NONE	Normal House/Unit On/Off function
	LOW	With A7=L, changes 2 minute On/Off wait to 2 seconds (Annunciation - Animal Deterrent)
A7	HIGH	Turn on selected House/Unit number
	NONE	Toggle selected House/Unit number On/Off
	LOW	Turn on selected House/Unit number, wait 2 minutes, turn off (Occupancy Lighting - Intruder Deterrent)