



CD100SNY

Sony Mega-Changer Adapter
For Rowe CD100 Jukeboxes



Compatible Sony Changers

- CDP-CX53
- CDP-CX55
- CDP-CX57
- CDP-CX70ES
- CDP-CX88ES
- CDP-CX200
- CDP-CX205
- CDP-CX210
- CDP-CX220
- CDP-CX225
- CDP-CX230
- CDP-CX235
- CDP-CX240
- CDP-CX250
- CDP-CX255
- CDP-CX260
- CDP-CX270
- CDP-CX333ES
- CDP-CX335ES
- CDP-CX300
- CDP-CX335
- CDP-CX350
- CDP-CX355
- CDP-M333ES
- CDP-M555ES
- CDP-CX400
- CDP-CX450
- CDP-CX455

Installation



The phone plug from the Sony adapter connects to the S-Link or Control-A1 jack on the back of your Sony CD Mega-Changer.

Set the command mode switch to CD #1.

Connect the 6-Pin Molex connector to P2, P3 or P4 on your jukebox Central Control Computer.

At the CCC connector position P10, P11 or P12, unplug the 3-pin CD Mechanism connector and plug in the Sony adapter connector.

To do full initialize: select service mode, press 30

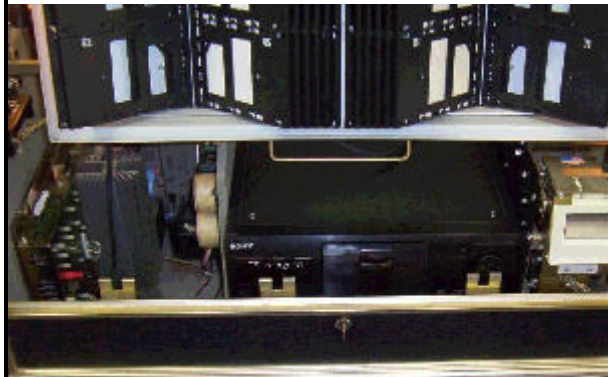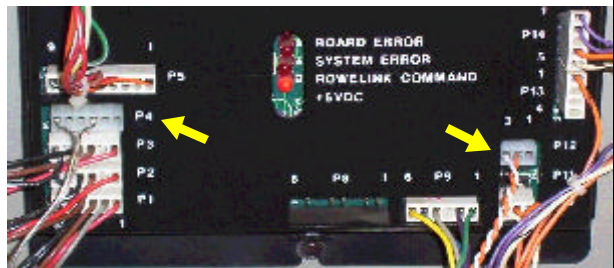

Data Sync Engineering
PO Box 539, Footbridge Lane, Bldg 3
Blairstown, New Jersey 07825

TEL: (908) 362-6299
FAX: (908) 362-5889
<http://www.datasynceng.com>