

780 ACCEPTOR


QUARTER
CRADLE


NICKEL
CRADLE

PENNY
CRADLE

NICKEL
REJECT
SCREW

Remove screw to
accept nickels

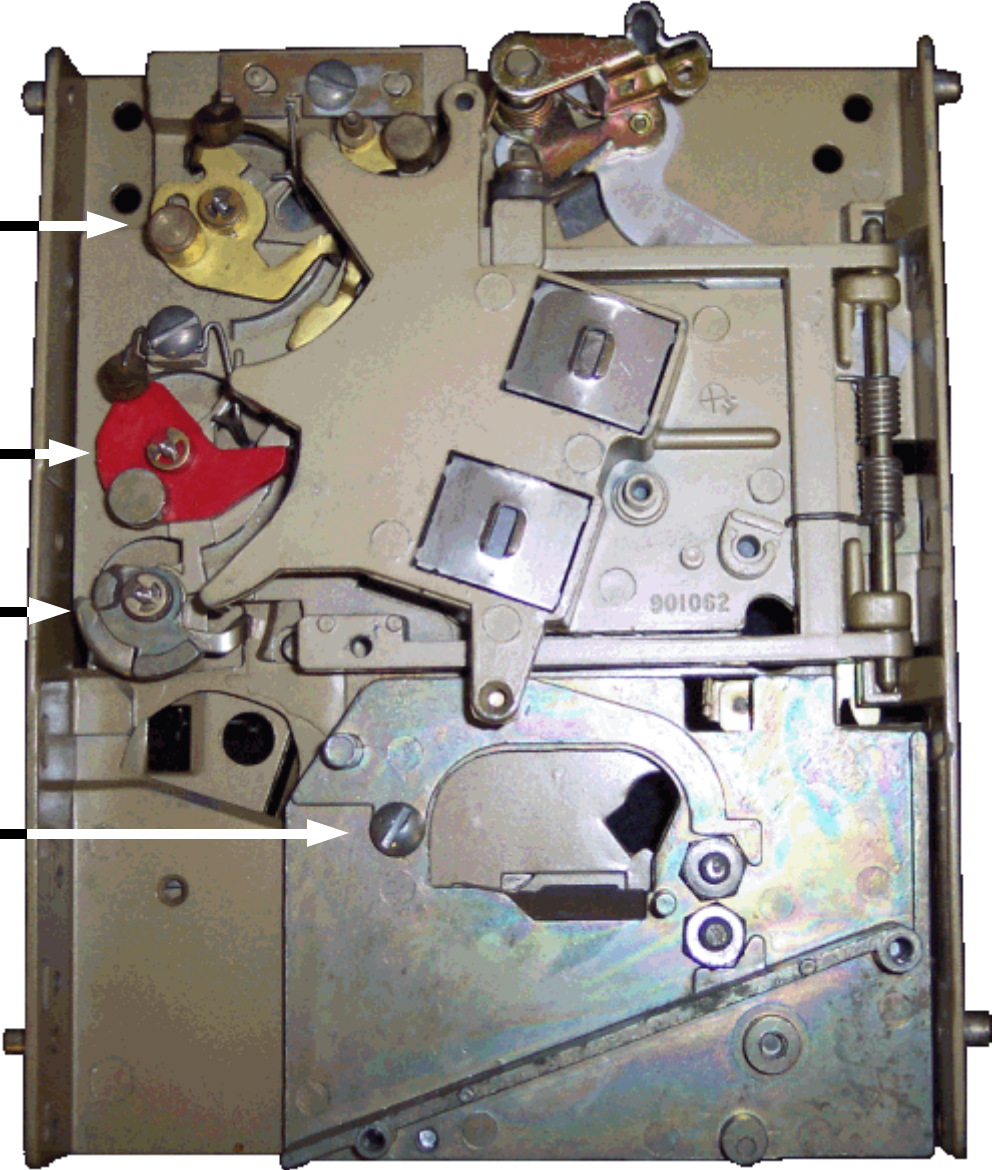

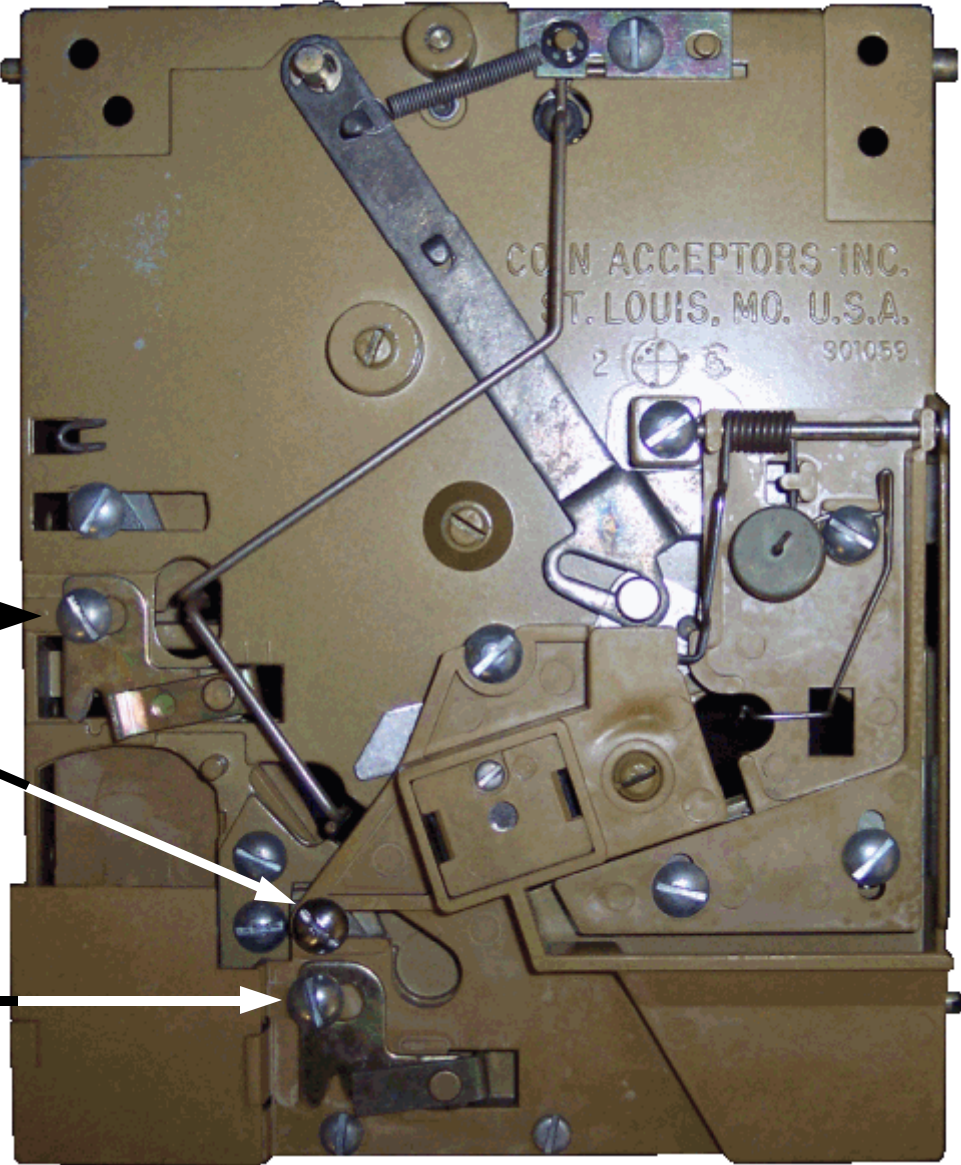

Quarter Adjustment

Move this screw to the right to reject dimes (or just far enough to the left to accept dimes)

Dime Adjustment