

# Wireless Remote for Pioneer CJ-Vxx Jukeboxes

Simply plug it into the remote control connector and enjoy the easy convenience of wireless control.

VOLUME UP, VOLUME DOWN and CANCEL are only available using a wired remote, but with this wireless remote control, you can easily adjust the volume level or cancel a play from a distance of over 60 feet.

The remote control module has an LED that blinks whenever the remote sensor is receiving infrared commands.

The remote control sensor module, measuring only 2.13" x 1.38" x .58", has an 8ft (2.4m) connector cable and is small enough to be placed just about anywhere.



## Jukebox Connection



The PIO-RC works with any Pioneer LaserJuke.

This includes all models, CJ-V55 through CJ-V99 that have the 4-pin Mini DIN control connector.

The remote control receiver is powered from an AC adapter, which is included.




**Data Sync Engineering**  
P.O. Box 539, Footbridge Lane, Bldg 3  
Blairstown, New Jersey 07825

**TEL: (908) 362-6299**  
**FAX: (908) 362-5889**

[www.datasynceng.com](http://www.datasynceng.com)

## Remote Control Buttons

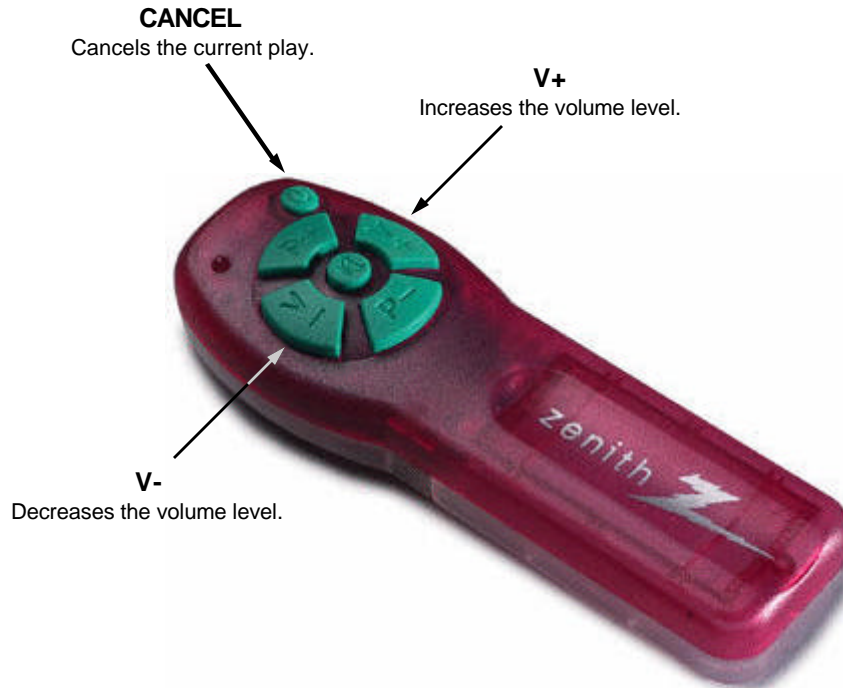

Remote control colors may vary, typical color is black with red buttons.

## Remote Control Set Up

1. Press and Hold the Power and Mute buttons simultaneously until the red LED remains on.
2. Release the buttons.
3. Enter the 3 digit code. For the PIO-RC, press V- CH+ CH+ then press MUTE.

The PIO-RC will work with any other universal TV remote. The TV code is Optimus or Pioneer. You can also use the remotes "code search" feature. Start a song play on the jukebox. Follow the manufacturers instructions for code searching. When the jukebox stops playing, the remote code was found.