 



# ERROR DISPLAY

## 2.3 COMMANDER SECTION


### ● FRONT VIEW

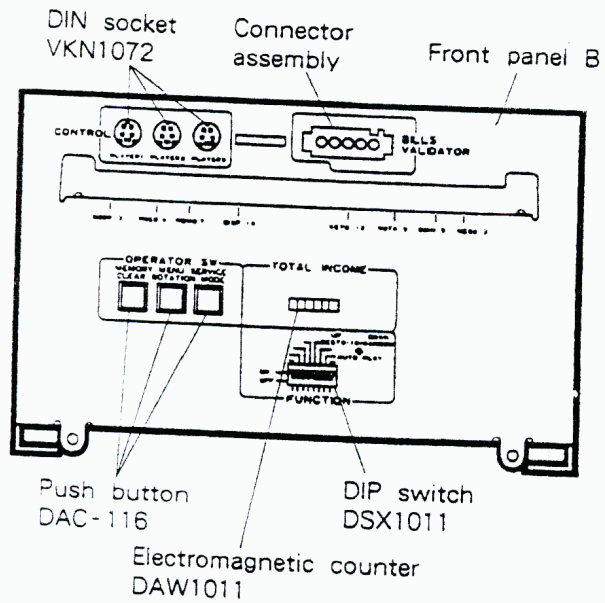
 
### ● REAR VIEW

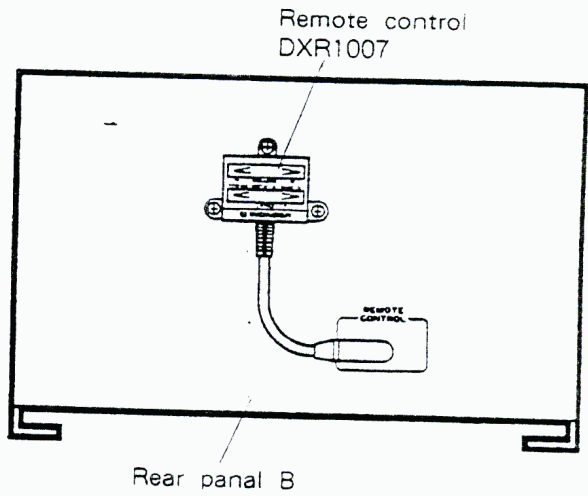

### ● TOP VIEW

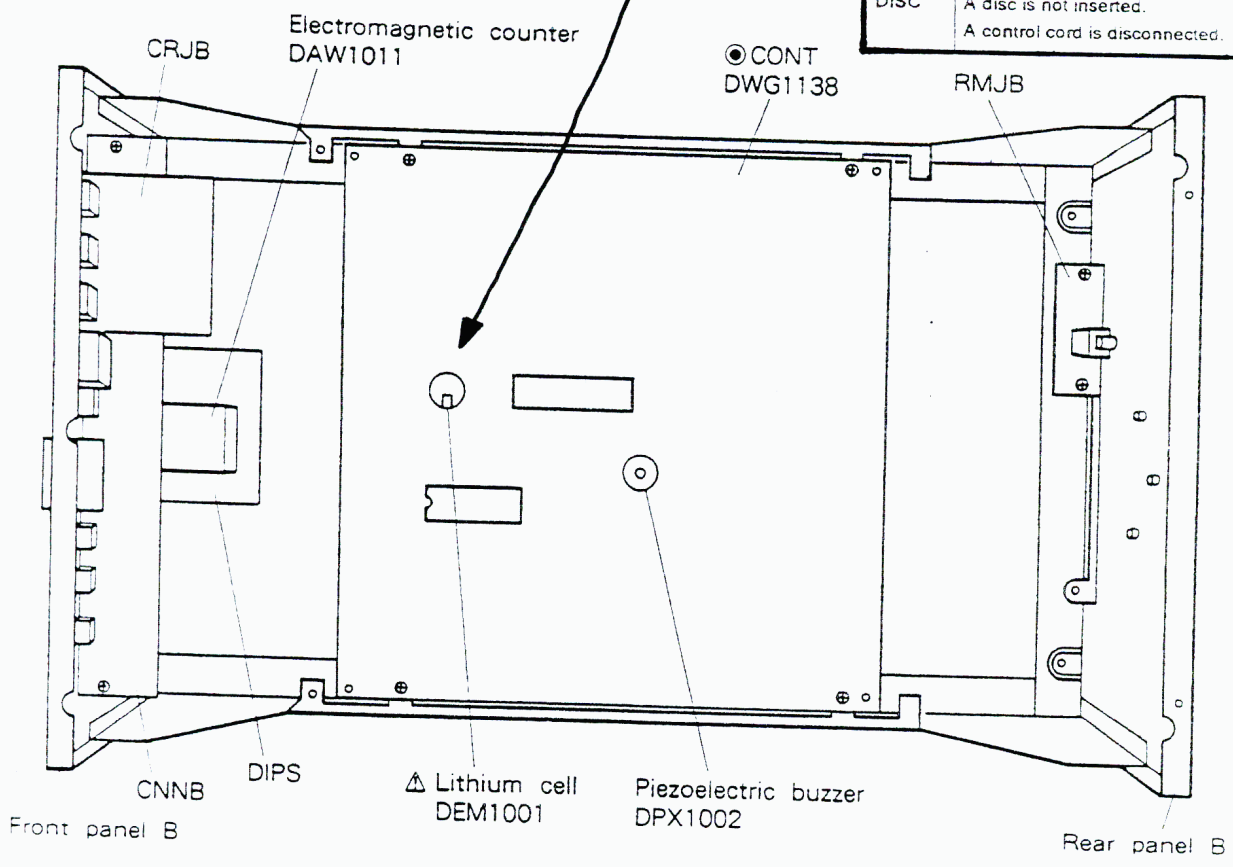 

LED Display	Causes
ERR0	ROM abnormality ⇒ Replace the CONT. (Note)
ERR1	RAM abnormality ⇒ Check the voltage of BACKUP battery. (if enough capacity does not remains)
ERR2	Player abnormality ⇒ Player change
DISC	A disc is not inserted. A control cord is disconnected.