

Quick Start Sheet for the WMP-255 "Wallbox Music Player"

The very first thing you need to do is set up the wireless Remote Control

The remote control requires two AAA 1.5V batteries (these are not included).

After inserting the batteries, Press & hold the "Code Search" button until the LED remains on. Using numeric buttons, enter the four digits 0 0 4 1, the LED should turn off. If not, retry again.

If the LED didn't turn on after holding the "Code Search" button for about 10-seconds, remove the batteries, hold the Power button for a few seconds then insert the batteries and try again.

Important notice about the folder numbers set for AutoPlay (3xx) & Wallbox (8xx)

If this is a new WMP-255, or after a Factory Reset, folder numbers are set to "01", (301) & (801). Make sure you have folder "01", with some songs, in order to pass the Power-Up self test.

Power Up sequence of the WMP-255 player

At Power-Up, the green LED should turn on, then the red LED flashes then turns off followed by the green LED turning off. This indicates the player passed the Power-Up test and is ready.

The audio line-out jack is 3.5mm and requires an amplifier with speakers. If an amplifier is not available, you can use head-phones or you can plug in a Bluetooth Transmitter to allow pairing to Bluetooth Speakers.


Green LED always on

If an AutoPlay or Wallbox folder does not exist, or is empty, the green LED will remain on for about a minute, then will error out by resetting the AutoPlay and Wallbox folders back to "01", (301) & (801), followed by the green LED continuously flashing five times. Re-power the unit so folder "01" will be used. Maybe a good idea to always have folder "01" with songs, just in case.


Red & Green LED always on

This may indicate a problem with the SD memory card, check the following conditions ...

- ~ SD memory card is not FAT32. (SD cards, 4GB to 32GB, are usually FAT32 pre-formatted).
- ~ Music format can only be MP3 or WAV. Changing file type, such as M4A to MP3, will not work.
- ~ Song folder names can only be two digits, such as 01, 02, 03 ... 97, 98, 99
- ~ Song names must be 3-digits 001 to 255 which can be followed by optional text.

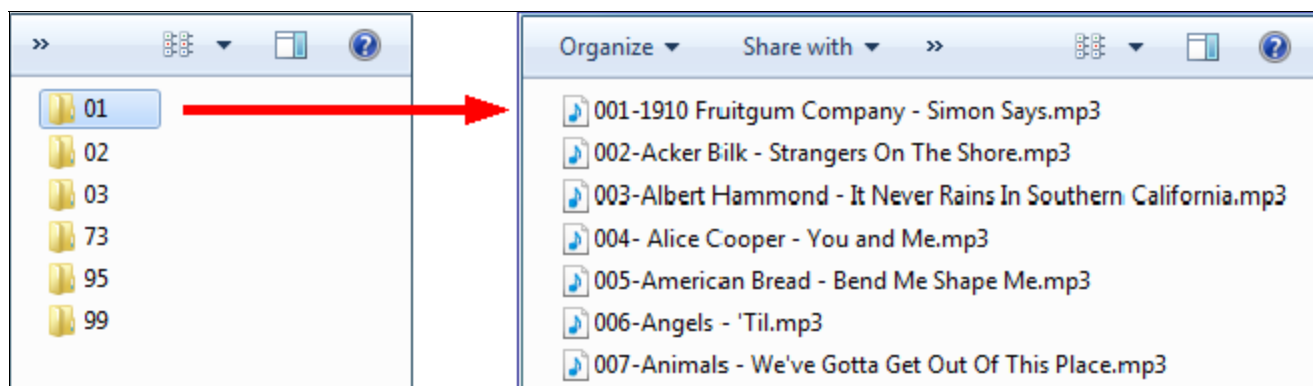

Seeburg Consolette SC1 to SC4 Speaker Wire Connections

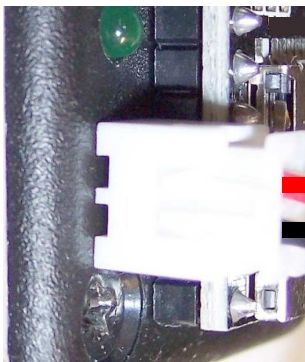

From the WMP-255 Player
Connect the RED wire to both the GRN & YEL terminals
Connect the BLK wire to the GRY terminal
This allows you to use the LOW / MED / HIGH buttons

SPEAKER TERMINALS
GRY Speaker Ground
GRN Right Channel
YEL Left Channel

⚠ Wires can only be connected to speakers.
Any other connection may damage player.

