
## MP3-DSP REMOTE CONTROL AND/OR LCD READOUT

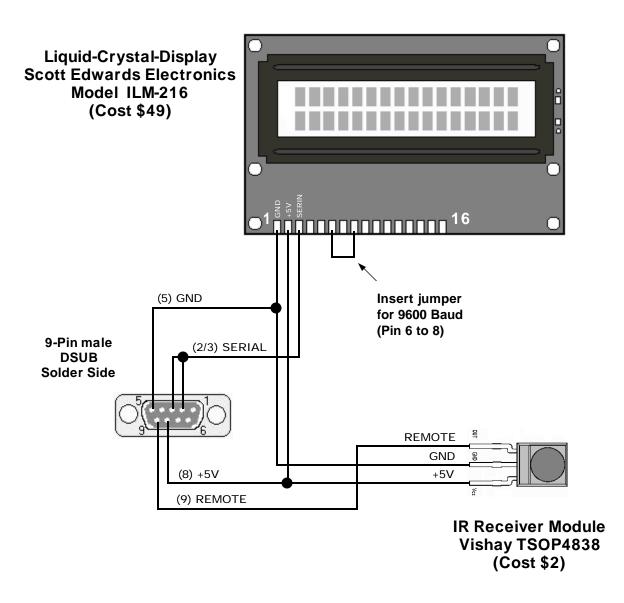

## **Works with any Universal Remote Control** Including the Pioneer PD-F CD changer remote and Zenith Klicker Jr.

Volume +	=	Track up	(Next file)
Volume -	=	Track down	(Previous file)
Channel +	=	Disc up	(Next folder)
Channel -	=	Disc down	(Previous folder)
Mute	=	Stop	
Power	=	Play/Pause	

If playing, LCD shows file name (Artist – Title). If stopped, LCD shows folder name.