

Wireless Remote for Seeburg SCD Jukeboxes

Takes only seconds to install and allows you to enjoy the easy convenience plus the additional features of your jukebox.


VOLUME UP, VOLUME DOWN and REJECT are the only functions available with push-buttons, but with this remote control, you can have these functions plus BACKGROUND play.

The remote control module has an LED that blinks whenever the remote sensor is receiving infrared commands.

The remote control sensor module, measuring only 2.13" x 1.38" x .58", has an 8ft (2.4m) connector cable and is small enough to be placed just about anywhere.



Jukebox Connection

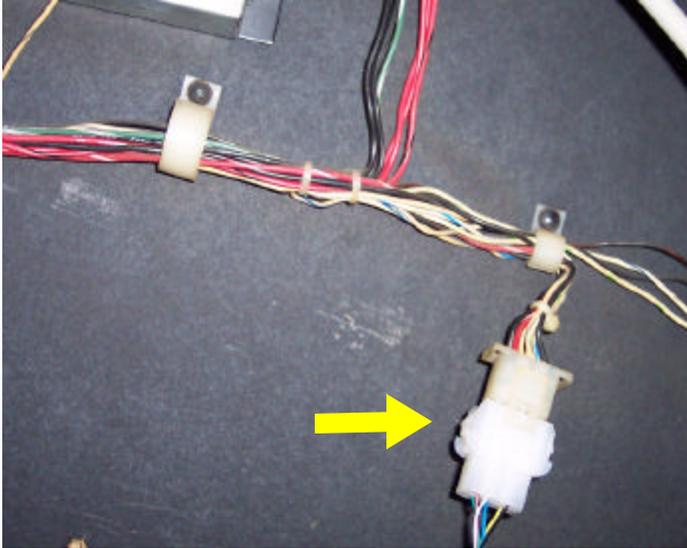

!! IMPORTANT !!

Make sure connectors are firmly attached

The SBG-RC connects to any Seeburg SCD jukebox that has the 6-pin remote control connector.

It's located on the left side, near the Phono Control Assembly.

On Seeburg SCD jukeboxes, the Background music feature only works with wireless or wired remotes.

For the SCD-1

Switch C4 on enables BGM

Switch C5 off = all discs, on = discs 51-60

For the SCD-1A

Set switch D4 on to set ...

BGM Group and Play Stimulator Time.

Set switch D4 off for normal play.



Data Sync Engineering


P.O. Box 539, Footbridge Lane, Bldg 3
Blairstown, New Jersey 07825

TEL: (908) 362-6299

FAX: (908) 362-5889

www.datasynceng.com

Remote Control Buttons

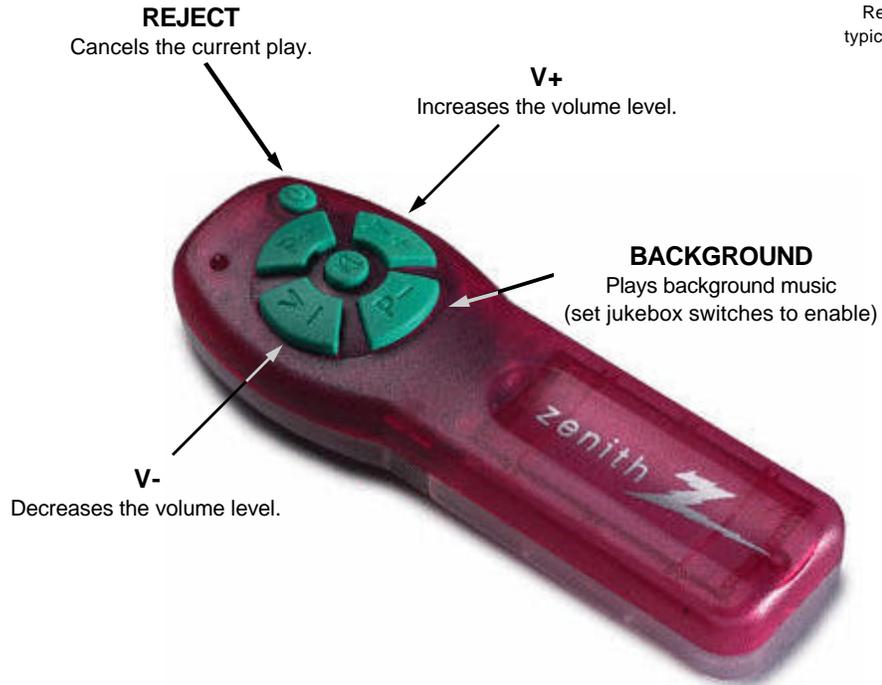

Remote control colors may vary,
typical color is black with red buttons.



Remote Control Set Up

1. Press and Hold the Power and Mute buttons simultaneously until the red LED remains on.
2. Release the buttons.
3. Enter the setup code, press V- CH+ CH+ then press MUTE.